



## Operation and Cleaning Instructions for the Carpet Cleaner (Puzzi by K'A'Rcher)

### Operations

	<b>Instruction</b>	<b>Notes</b>
	<b>Getting started and commence cleaning</b>	
1.	Mix fresh water and detergent in a clean container (use concentration recommended for the detergent). Warm water (max 50 degrees Celsius) will increase the cleaning effect.	Health Risk – observe all indications on the detergent used
2.	Fill detergent solution into the fresh water reservoir. The fill level must not exceed the MAX mark.	
3.	Insert dirt water reservoir into the appliance and attach lid.	
4.	Plug in the main plug.	
5.	Press the suction switch to turn on the suction turbine. Press the spray switch to turn on the detergent pump	Warning – test an area in an inconspicuous place for colour fastness and water resistance.
6.	Use the lever on the bender to spray on detergent solution. Run across the surface to be cleaned in overlapping paths. Pull the nozzle backwards (do not push).	
7.	In case of interruptions, the floor nozzle can be stored in the handle on top of the carpet cleaner (same place as where the floor nozzle is stored whilst transporting the carpet cleaner).	
	<b>Empty Dirty Water</b>	<b>Notes</b>
1.	If the dirty water reservoir is full, switch off the suction and spray switches.	
2.	Remove the lid	
3.	Remove the dirt water reservoir from the appliance and empty it.	
	<b>Cleaning Methods</b>	<b>Notes</b>
1.	For normal soiling: Spray and suction off detergent solution in one work cycle.	A repeated suctioning without spraying will shorten the drying the time.
2.	For strong soiling or stains: <ul style="list-style-type: none"> <li>Apply detergent solution with suction turbine turned off and soak for 10-15 minutes.</li> <li>Clean the surface just like with normal soiling</li> <li>In order to further improve the cleaning result, the surface can be re-cleaned using clear, warm water</li> </ul>	<b>Cleaning Tips:</b> <ul style="list-style-type: none"> <li>Pre-soak highly soiled spots and soak in detergent solution for 10-15mins.</li> <li>Always work from light to shade</li> <li>Always work from cleaned to un-cleaned surface</li> <li>The more sensitive the surface, the lower the concentration of the detergent should be.</li> <li>Rugs with jute backing can shrink if too much water is used and can bleed colours.</li> <li>Brush high-fibre rugs in the direction of the weave after cleaning.</li> </ul>

		<ul style="list-style-type: none"> <li>• Water-proofing the fabric after cleaning prevents a quick re-soiling of the textile surface</li> <li>• Do not step on cleaned surfaces or place furniture until dried to avoid pressure spots or rust stains</li> </ul>
	<b>Shutting Down – Empty the fresh water reservoir</b>	<b>Notes</b>
1.	Switch off the spray and suction switches	
2	Shortly activate the lever on the bender to decrease the pressure and separate bender from the spray/suction hose	
3.	Remove the lid and insert the suction hose into the fresh water reservoir	
4.	Press the suction switch to turn on the suction turbine.	
5.	Empty the fresh water reservoir and switch the appliance off.	
6.	Remove the dirt water reservoir from the appliance and empty it.	
	<b>Shutting Down - Cleaning the device</b>	<b>Notes</b>
1.	Connect the bender (with suction pipe and nozzle) to the suction hose.	
2.	Connect the coupling of the fresh water hose to the bender and lock into place.	
3.	Fill approx 2L of fresh water into the fresh water reservoir.	<b>Do Not Add any Detergents</b>
4.	Place nozzle into the dirt water reservoir and press the spray switch to turn on the detergent pump.	
5.	Activate lever on bender and flush the appliance for approx 1-2 minutes.	
6.	Turn off the appliance and disconnect the mains plug from the socket.	
7.	Remove the dirt water reservoir from the appliance and empty.	
8.	Clean the external surfaces of the appliance.	